



Installing Motorola V276 Headphone Jack

Tools used in this guide

- [Spudger](#)




Step 1 - Battery

- Locate the silver button near the bottom of the back of your phone.
- Press the button with one hand while sliding the back cover of the phone away from the antenna.
- The back cover should slide off easily.



Step 2

- Insert the spudger near one corner of the battery (preferably one furthest from the phone's antenna).
- With a firm grip, gently lift the end of your tool up. The battery should easily raise out of its place.
- Now that the battery is easy to get a hold it, use your hands to take the battery out of the phone.

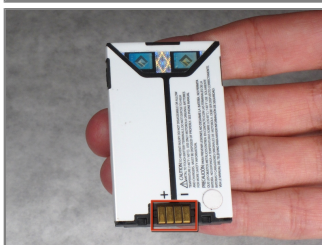

Step 3

- Note the metal connections on the phone, which are now exposed with the battery removed.
- There are corresponding metal connectors on the replacement battery.
- When you install the battery, be sure both connectors are matched up. Otherwise, your battery will be unable to supply power to your phone.



Step 4 - Headphone Jack

- Use Spudger to remove rubber plug from upper left corner of the back of the phone



Step 5


- Using a Hex T6 screwdriver, remove the 4 screws holding the back plate of the phone in place



Step 6

- Using your hands, pull up on the back plate while pulling on the 3 side tabs to remove the back plate.
- Be careful when removing the back plate; don't put too much stress on the back plate or the plastic may snap



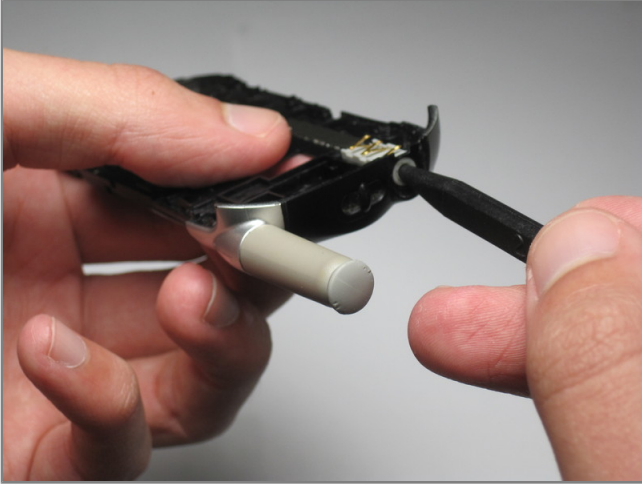

Step 7

- On the back casing, using a spudger, push into the headphone jack at an upward angle to pop it out